

BLOKUP

glass block specialists



THE FAST, EASY
WAY TO INSTALL
GLASS BLOCKS

Before



After



Now there's a faster, easier way to enhance any project, large or small, with authentic glass blocks.

The Blokup system allows you to build framed, frameless or curved walls eliminating the need for specialized labor, whilst still ensuring a sturdy and professional result.

Blokup The Advantages

- Design Versatility; systems for curved, stepped or straight walls.
- Ease of block assembly
- Faster installation and lower costs
- 3 way weather tight; silicone inside, sealant front and rear seals
- Horizontal and vertical aluminum separation strips.

Feature Wall

Add light, privacy, colour and the fantastic feeling that only a glass wall can give you to your home. With a huge selection of blocks available, you can cost effectively build a feature wall to suit your style.

One of the best aspects of a Blokup feature wall is that the selection of blocks on offer allows you to build a magnificent addition to your home or office that will fit in any décor. Whether you want to partition an area or just create a unique talking point, a Blokup wall offers so many options and installation is a breeze.



Talk to one of our experienced staff about what options are available and learn how easily you can create an elegant look in your space that only a glass block wall can give your home.



Assemble frame and fasten in opening




Line silicon across centre of frame and bed in 1st row of glass blocks

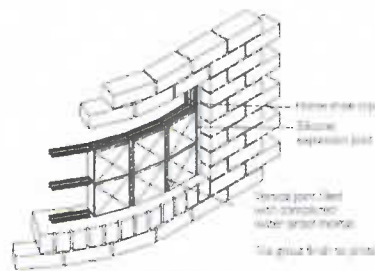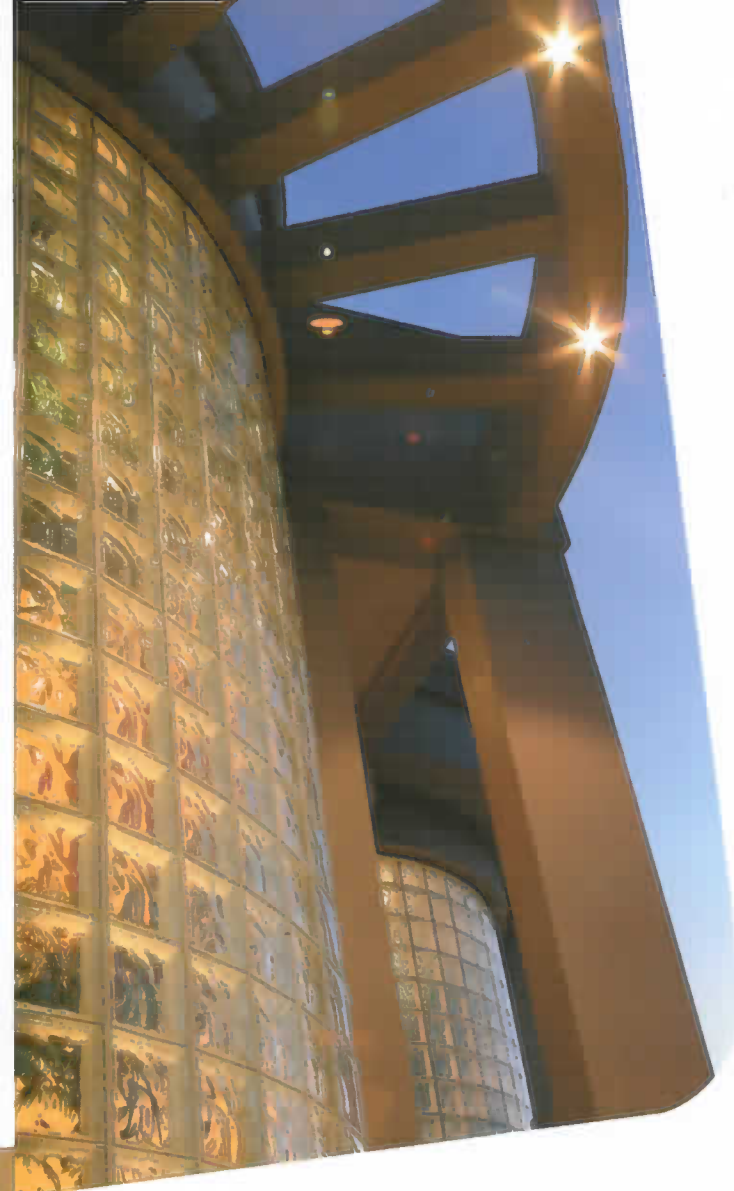

Standard construction curved Blokup glass block wall

PLANNING A RADIUS WALL

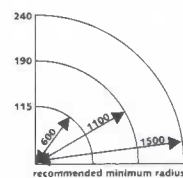

Curved Wall System

The Blokup curved wall system makes a spectacular feature wall or entry. With Blokup's centered system, you can maintain the open feeling to your home and have your privacy too.

In the past, curved walls required professional installation, which was a costly exercise that placed glass block walls outside of the price range of many homeowners. With Blokup's easy to use system, you can now install a curved wall yourself to give your home or office the unique look that only glass blocks can offer.

This system is so exceptional and easy to use that even the most inexperienced handy-person can buy and assemble the most complex of curves with amazing results. You are not on your own though, one of our experienced staff can show you how easy it can be and offer answers to your questions.

Opening Window

Now any bathroom or kitchen feature window can be opened providing greater ventilation, maintaining privacy and letting light into the far corners of your favorite room. The Blokup Opening Window system is thin, light, strong and simple to install.

The Blokup Opening Window removes the need for window coverings all together meaning that you can keep prying eyes out and still let nature light up your life during the day, giving your home a more open feel. The Opening Window also gives the added benefit of thermal protection, helping to keep the heat out and the warmth in, saving you money on electricity all year round.

It is very easy to combine your existing windows with ours as we work with all major window manufacturers and builders so that we can make the inclusion of a Blokup Opening Window an easy and enjoyable experience.

You won't find anything that comes close to the Blokup Opening Window.





DIMENSIONAL TABLE

| NO OF BLOCKS | BLOKUP FRAME 50 X 25 or 85 X 25 | BLOKUP FRAMELESS CLIP SYSTEM |
|----------------|--|--|
| Size of blocks | 190mm x 190 x 50 or 190mm x 190 x 80 | 190mm x 190 x 50 or 190mm x 190 x 80 |
| I | 247 | 193 |
| 2 | 440 | 386 |
| 3 | 633 | 579 |
| 4 | 824 | 772 |
| 5 | 1017 | 965 |
| 6 | 1209 | 1158 |
| 7 | 1402 | 1351 |
| 8 | 1595 | 1544 |
| 9 | 1788 | 1737 |
| 10 | 1981 | 1930 |
| 11 | 2173 | 2123 |
| 12 | 2366 | 2316 |
| 13 | 2559 | 2509 |
| 14 | 2752 | 2702 |
| 15 | 2945 | 2895 |

* Please Note: create openings 5mm greater than the dimensions above, or if a timber reveal is required add 50mm for your openings.

Use this table with your predetermined exact dimensions (height and width) to determine the number of glass blocks that you need to complete your project.

Follow this sequence:

1. Select your framed or frameless installation system.
2. Determine how many blocks will fit your height.
3. Determine how many blocks will fit your width.
4. Multiply number of blocks high by number of blocks wide.

Example: Using Blokup frame, 10 blocks high by 7 blocks wide equals 1981mm high by 1402mm wide.

FREE CALL 1 800 679 577

**GLASS BLOCK
ADVANTAGE**

U8 | Canal Rd St Peters 2044
Ph 02 9557 2727 Fax 02 9557 4355

**THE GLASS
BLOCK SHOP**
CONCEPT, DESIGN & INSTALLATION

41 Frederick Street Northgate Q: D 4013
Ph 07 3266 8600 Fax 07 3266 8333

www.blokup.com.au

Your Stockist: